


ADC usage

 This section needs config and enable the ADC before you use it .

ADC channel	Position	
ADC1	J3.33	
ADC2	J3.35	

On Linux system, the ADC use IIO subsystem. Use can through SYSFS interface to visit ADC controller.

```
cat /sys/bus/iio/devices/iio\:device0/in_voltage5_raw
```