

"/etc/network/interfaces"

```
auto lo
iface lo inet loopback
iface ppp0 inet ppp
#       provider gprs-dial
#       provider 3g-dial
#       provider quectel-dial
#       provider ppp-dial
auto eth0
iface eth0 inet dhcp
        udhcpc_opts -t 1 -S
auto eth1
iface eth1 inet dhcp
        udhcpc_opts -t 1 -S

## Example bridge between eth0 and wlan0
#auto br0
#iface br0 inet static
#       bridge_ports eth0 wlan0
#       address 192.168.42.50
#       netmask 255.255.255.0
```

IP

eth0eth1DHCPeth0



tab

```
auto eth0
iface eth0 inet static
        address 192.168.1.100
        netmask 255.255.255.0
        gateway 192.168.1.1
        udhcpc_opts -t 1 -S
```

DNS

eth0DNS;

```
auto eth0
iface eth0 inet static
        address 192.168.1.100
        netmask 255.255.255.0
        gateway 192.168.1.1
        udhcpc_opts -t 1 -S
        dns-nameserver 8.8.8.8
        dns-nameserver 8.8.4.4
```

WiFieth0

```
iface br0 inet dhcp
    bridge_ports eth0 wlan0
    pre-up ifconfig eth0 0.0.0.0 up
    pre-up ifconfig wlan0 0.0.0.0 up
    pre-up iwconfig wlan0 mode master
    pre-up brctl addbr br0
    pre-up brctl addif eth0
    pre-up brctl addif wlan0
    post-down ifconfig eth0 0.0.0.0 down
    post-down ifconfig wlan0 0.0.0.0 down
    post-down brctl delif br0 eth0
    post-down brctl delif br0 wlan0
    post-down brctl delbr br0
```